

Network Printer Setup Instructions

Step 1

- Make sure that all these items are ready.
 1. Determine running Static or DHCP
 2. IP Address for the Printer
 3. Subnet Mask
 4. Default Gateway
 5. Make sure the NIC has one blinking Green Light (top) and one solid Green Light (bottom)

Step 2

- Print out a Printer Network Configuration Page (Print Net CFG):
 1. Press Menu
 2. Scroll to the left
 3. When you see Network, press Enter
 4. Scroll to left until you see Print Net CFG, press Enter

Note: This will give you a baseline as to where or what you already have Setup.

Step 3

- Setting the IP Address manually:
 1. Press Menu
 2. Scroll to the left
 3. When you see Network, press Enter
 4. You will see Config Net, Press Enter
 5. You will see NO with an *, Scroll right to YES and press Enter, the * moves over to YES
 6. Press Upper Level, you will see Config Net, Press right scroll key, until you see Config TCP, press Enter
 7. You will see NO with an *, Scroll right until you see YES, press Enter, the * moves over to YES
 8. Press Upper Level, you will see Config TCP, Press Right scroll key, until you see Get IP Method, Press Enter
 9. By Default the printer is set for DHCP with an * by it, Scroll right until you see Static, press Enter, the * will appear
 10. Press Upper Level, you will see Get IP Method, Press the Right Scroll key, you will see IP Address, Press Enter
 11. Enter in the appropriate IP Address by using the Left and Right Scroll keys (Left Scroll goes Backwards, Right Scrolls Forward) after each octet press Enter, when you finish you will see IP Address, Scroll Right and you will see Subnet Mask, Press Enter

12. To enter in the Subnet mask and the Default Gateway Follow Step 11, (to get to Default Gateway after entering in the Subnet Mask, press the Right Scroll Key Until you see Default Gateway, press Enter)
13. When you finish press the Online Button
14. Ping the Printer using its IP Address which you assigned
15. Go to Run
16. Type in CMD for 2000 and XP, and for Win 9X/ME type in Command
17. At the C:\ type Example: (C:\>ping 0.0.0.0), If you get a reply then you are able to communicate, if you get time out you are not communicating.

Step 4

- Setting up you IP Address on Windows 2000 and Windows XP
- For Windows XP
 1. Click Start
 2. Click Control Panel
 3. Click Printers and Faxes or Printers and Other Hardware then Printers and Faxes
 4. Right click on the Printer Icon
 5. Left Click Properties,
 6. Go to Ports
 7. Click Add Port
 8. Standard TCP/IP Port
 9. Click New Port
 10. Click Next
 11. Enter in the IP Address
 12. Click Next
 13. Generic Network Card Click Next
 14. It will build the driver information
 15. Click Finish
 16. Check ports for your new IP Port and make sure it is checked and click Apply
 17. Click the General Tab, in the lower hand corner you will see Print Test Page, Click on Print Test Page, If the document comes out you have Successfully installed the Network Printer
- For Windows 2000
 1. Click on Start
 2. Click on Settings
 3. Click on Printers
 4. Right click on the Printer Icon
 5. Left Click Properties,
 6. Go to Ports
 7. Click Add Port
 8. Standard TCP/IP Port
 9. Click New Port
 10. Click Next
 11. Enter in the IP Address

12. Click Next
 13. Generic Network Card Click Next
 14. It will build the driver information
 15. Click Finish
 16. Check ports for your new IP Port and make sure it is checked and click Apply
 17. Click the General Tab, in the lower hand corner you will see Print Test Page, Click on Print Test Page, If the document comes out you have Successfully installed the Network Printer
- For Windows 9X/ME
 1. Click on Start
 2. Click on Settings
 3. Click on Printers
 4. Right click on the Printer Icon
 5. Left Click Properties,
 6. Go to Details Tab
 7. Click Add Port
 8. Click Other
 9. Select Samsung Network Printer Port
 10. Click Next
 11. Enter in the IP Address
 12. Click Next
 13. Generic Network Card Click Next
 14. It will build the driver information
 15. Click Finish
 16. Check ports for your new IP Port and make sure it is checked and click Apply
 17. Click the General Tab, in the lower hand corner you will see Print Test Page, Click on Print Test Page, If the document comes out you have Successfully installed the Network Printer

(Note: You Must have SyncThru Installed for Win 95, Win 98, Win ME, and Win NT, it installs the Samsung Network Printer Port)